




# Instruction Rugby

For 7-button remote control.

LED score board

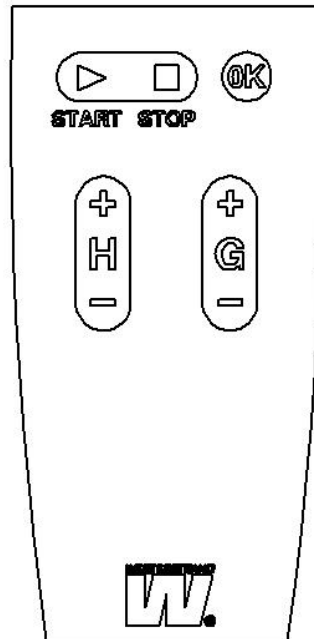

## Starting up

- Switch on the mains to the scoreboard.
- Check that the remote control has batteries in good condition.
- Press and hold button START (for at least 2 sec). The score board is showing a new match.

## Important

Home team = H.

Guest team = G.

Press and hold means for at least 2 seconds.



WESTERSTRAND SPORTSYSTEM  
SECTION – MULTISPORT  
Rugby

Document: 2940en01.doc  
Author: DB  
Date: 2009-02-19  
Page: 2 of 2  
Program ver.

**1. Timekeeping**

- Button START and button STOP.

**2. Score**

- Button H+ or G+, for either the home- or guest team.
- Button H- or G-, for either the home- or guest team.

**3. New half**

- Stop the match time with button STOP.
- Press and hold button G+. Match time is set to 40:00.

**4. Downcounting / Correction of match time**

- Button STOP.
- Press and hold OK to adjust match time. The first digit is now flashing.
- Change the digit with button H+ and H-.
- Accept with button OK. The next digit is chosen automatically.
- Repeat until "UP" is showing on the score board.
- Then you can choose up- or down- counting of match time with H+.
- Accept with button OK.
- Button START starts counting of match time.

**5. When the match is over**

- Stop the match time with button STOP.

If new match:

- Press and hold button START.

If not:

- Press and hold button STOP. The score board is either blanked or showing real time.

**6. Realtid (option)**

- Stop the match time if it is displayed with button STOP.
- Turn off the score board / show real time by pressing and holding button STOP.
- Activate / deactivate real time by pressing and holding button STOP.

Adjust real time:

- Press and hold OK. First digit is flashing.
- Enter the year on the format YYYY (for example 2008) by H+ and accept the digit by pressing button OK.
- Then enter month and day, MM.DD, and then hour and minutes, HH:MM, in the same way as with the year.

---

**WESTERSTRAND URFABRIK AB**

Box 133  
545 23 TÖREBODA

Tel. 0506 48000  
Fax. 0506 48051

Internet: <http://www.westerstrand.se>  
E-mail: [info@westerstrand.se](mailto:info@westerstrand.se)